

BRASS DRYER

Usage instructions

Product #909213

Instructions #1048609

Rev. A

STOP!

If you have a problem with this product, **DON'T RETURN IT TO THE STORE WHERE YOU PURCHASED IT.** Contact customer service at...

Battenfeld
Technologies, Inc.

2501 LeMone Industrial Blvd. / Columbia, MO 65201
573-445-9200 / Email: sales@battenfeldtechnologies.com
Or visit our website @ www.BTIbrands.com

NOT WARRANTED AGAINST MISUSE, ABUSE, OR COMMERCIAL USE.

Limited Warranty

Every Frankford Arsenal product is warranted to be free of defects in materials and workmanship for a period of one (1) year from the date of original purchase. Frankford Arsenal will, at its option, repair or replace without charge, except for transportation costs, parts that fail under normal use and service when operated and maintained in accordance with our Instructions. This warranty does not apply to normal wear or to items whose life is dependent upon their use and care. This warranty is in lieu of all other warranties, expressed or implied and releases Frankford Arsenal, its affiliates, and its vendors from all other obligations and liabilities.

Operation Instructions

- a. The temperature is fully adjustable between 90°F and 160°F.
 - i. Customer can adjust the temperature to their own desired drying procedure.
 - ii. For optimal drying time, set the temperature to 160°F.
- b. Divide the brass between the trays evenly so all of the trays have the same amount of brass.
- c. The dryer will hold up to around 1000x pieces of .223 rifle brass or 2000x pieces of 9mm pistol brass.
 - i. The drying time for 1000x pieces of .223 rifle brass or 2000x pieces of 9mm pistol brass is typically around 1 hour.
- d. To turn the dryer on, plug into outlet. To turn the dryer off, unplug from outlet.

NOTE: The trays towards the top of the unit will dry first, as they are directly under the fan. For optimal results, rotate the bottom trays to the top halfway through the drying cycle.

Save these instructions



Important Safeguards



- Read all instructions.
- Do not use appliance for other than intended use. For drying brass only.
- Do not touch hot surfaces.
- To protect against electrical shock, do not immerse the power cord, plug, or housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before cleaning, before handling. Allow to cool before handling appliance.
- Do not operate this appliance with a damaged cord or plug, or if the unit malfunctions or is dropped or damaged in any manner. Return the unit for examination, repair, or electrical or mechanical adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries
- Do not use outdoors
- Do not let cord hang over edge of table or counter, or touch hot surfaces
- Do not place on or near a hot gas or electric burner, or in a heated oven
- Improper use of the appliance can cause damage to the product and injury to the user.
- Do not operate appliance in a confined area.
- Do not leave the appliance unattended while in use.
- Only use the appliance on a flat , non-combustable surface.
- Brass cases will be hot after the dryer has completed. Allow brass to cool to room temperature before handling.
- This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Battenfeld[®]
Technologies, Inc.

2501 LeMone Industrial Blvd. / Columbia, MO 65201
573-445-9200 / Email: sales@battenfeldtechnologies.com