

ACTION & CHAMBER TOOL CLEANING SET

STOP!

If you have a problem with this product, **DON'T RETURN IT TO THE STORE WHERE YOU PURCHASED IT.** Contact customer service at...

Battenfeld
Technologies, Inc.

2501 LeMone Industrial Blvd. / Columbia, MO 65201
573-445-9200 / Email: sales@battenfeldtechnologies.com
Or visit our website @ www.BTIbrands.com

NOT WARRANTED AGAINST MISUSE, ABUSE, OR COMMERCIAL USE.

Limited Warranty

Every Tipton product is warranted to be free of defects in materials and workmanship for a period of one (1) year from the date of original purchase. Tipton will, at its option, repair or replace without charge, except for transportation costs, parts that fail under normal use and service when operated and maintained in accordance with our Instructions. This warranty does not apply to normal wear or to items whose life is dependent upon their use and care. This warranty is in lieu of all other warranties, expressed or implied and releases Tipton, its affiliates, and its vendors from all other obligations and liabilities.



WARNING: IMPORTANT SAFETY INFORMATION!

- Always practice safe firearm handling
- Always hold the forend of the firearm when shooting off of this shooting rest or any rest. If it is not held, the recoil can cause the forend to jump out of the front bag, possibly causing damage to the firearm or injuring the shooter.

CAUTION:

Always make sure gun is unloaded before cleaning!
Remember to protect stock finish from solvents.

ACTION CLEANING TOOL INSTRUCTIONS

1. Insert swab into tool by rolling middle of swab into the slot provided. See Fig. 1.
2. Remove bolt. Insert swab fully into action and rotate to clean. Keeping swab horizontal during insertion and extraction will clean the bolt slide areas. See Fig. 2.

CHAMBER CLEANING TOOL

1. Attach the correct size Chamber Mop (8 - 32 thread) into Chamber Cleaning Tool. See Fig. 3.
2. Apply degreaser to Mop.
3. Insert into chamber through breech end of action and rotate in chamber to remove oil and powder residue. The degreaser will evaporate rapidly, leaving chamber clean and dry.

NYLON BRISTLE BRUSH

Use to clean the bolt face and the Locking Lug surfaces. See Fig. 4.

Note: Be sure to lubricate the bolt locking lugs and bolt slide areas before shooting.

ACTION CLEANING TOOL

SWAB

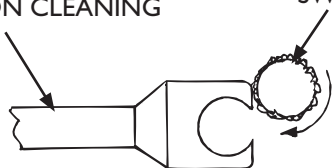 


FIG. 1

CHAMBER CLEANING TOOL

CHAMBER MOP



FIG. 3

CHAMBER CLEANING TOOL

SLIDE AREAS

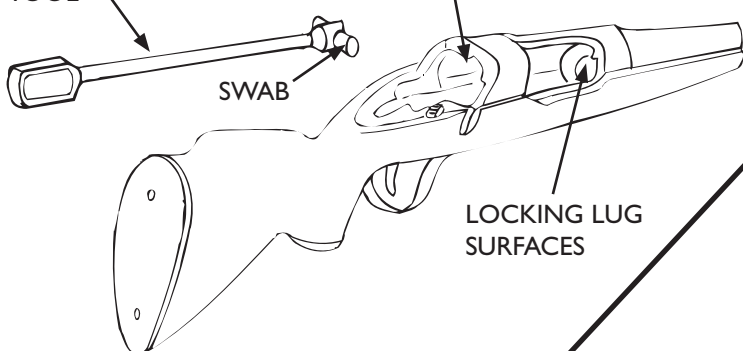 


FIG. 2

BOLT FACE

BOLT

LOCKING LUG SURFACES

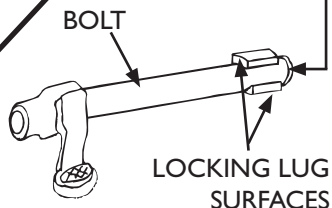 


FIG. 4